


Philips Metal Halide
360 Watt Econ-o-watt®

*Ideal for industrial
applications, warehouses
and parking lots*

METAL HALIDE LAMPS

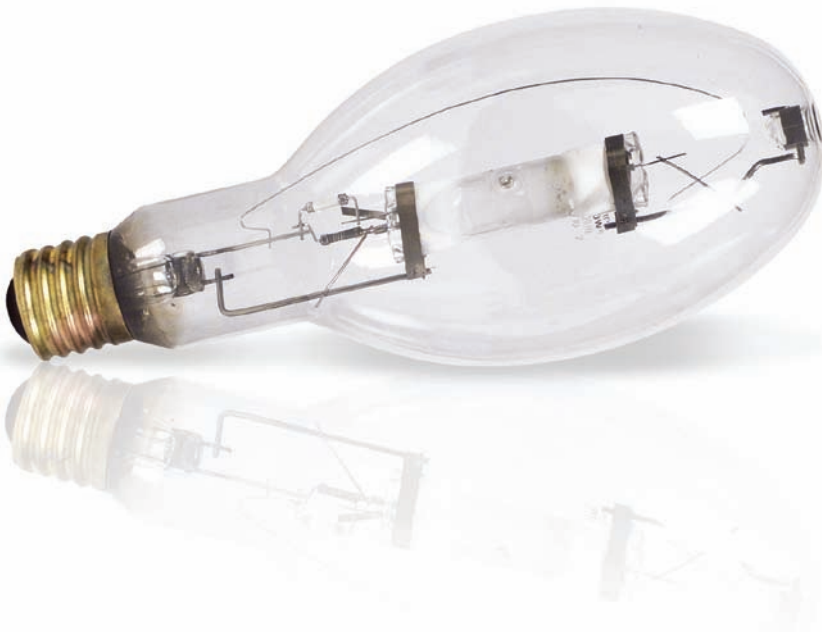

Metal Halide Econ-o-watt lamps

Philips Metal Halide Econ-o-watt lamps offer a range of switch start quartz metal halide lamps for long life and high efficiency.

Replaces 400W Standard Metal Halide Lamps

- Reduces energy usage by 40W compared to a 400W Metal Halide Lamp
- Same 36,000 initial lumens as a 400W Metal Halide Lamp
- Same 20,000 hours rated average life as a 400W Metal Halide Lamp
- Operates on Standard Metal Halide Ballasts

PHILIPS

sense and simplicity

Philips Metal Halide 360 Watt Econ-o-watt®

Ordering, Electrical and Technical Data

Product Number	Ordering Code	ANSI Code	Watts	Bulb	Base	Pkg. Qty.	LCL (In.)	MOL (In.)	Rated Avg. Life (Hrs.) ¹	Approx. Initial Lumens ²	Approx. Mean Lumens ³	CRI	CCT (Kelvin) ⁴
39065-8	MS360/BU/EW	M165/M59/S	360	ED-37	Mog.	6	7.0	11.5	20,000	36,000	24,500	60	4300
39066-6	MS360/C/BU/EW	M165/M59/S	360	ED-37	Mog.	6	—	11.5	20,000	34,200	22,600	65	4000

1) Rated average life is the life obtained, on the average, from large representative groups of lamps in laboratory tests under controlled conditions at 10 or more operating hours per start. It is based on survival of at least 50% of the lamps and allows for individual lamps or groups of lamps to vary considerably from the average.

2) Approximate lumen values listed are for vertical operation of the lamp.

3) Approximate lumen output at 40% of lamp rated average life.

4) Approximate color temperature in Kelvin degrees.


Above specifications are subject to change without notice.

Lamp Dimensions

Metal Halide 360W ED-37

A — 4.625"

B — 11.5"

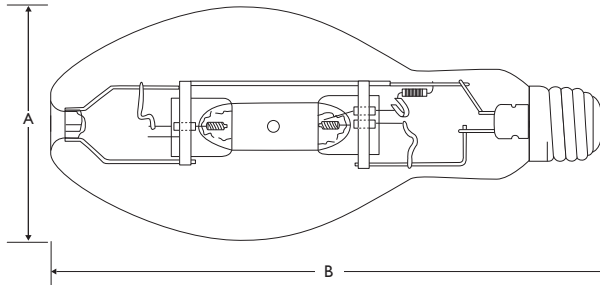

WARNINGS, CAUTIONS AND OPERATING INSTRUCTIONS FOR STANDARD METAL HALIDE LAMPS (ENCLOSED FIXTURES ONLY UNLESS OTHERWISE NOTED)

WARNING: These lamps can cause serious skin burn and eye inflammation from short wave ultraviolet radiation if outer envelope of the lamp is broken or punctured. Do not use where people will remain for more than a few minutes unless adequate shielding or other safety precautions are used. Certain lamps that will automatically extinguish when the outer envelope is broken or punctured are commercially available. This lamp complies with FDA radiation performance standard 21 CFR subchapter J, (USA: 21 CFR 1040.30 Canada: SOR/DORS/80-381)

If the outer bulb is broken or punctured, turn off at once and replace the lamp to avoid possible injury from hazardous short wave ultraviolet radiation. Do not scratch the outer bulb or subject it to pressure as this could cause the outer bulb to crack or shatter. A partial vacuum in the outer bulb may cause glass to fly if the envelope is struck.

WARNING: The arc-tube of metal halide lamps are designed to operate under high pressure and at temperatures up to 1000° C and can unexpectedly rupture due to internal or external factors such as a ballast failure or misapplication. If the arc-tube ruptures for any reason, the outer bulb may break and pieces of extremely hot glass might be discharged into the surrounding environment. If such a rupture were to happen, **THERE IS A RISK OF PERSONAL INJURY, PROPERTY DAMAGE, BURNS AND FIRE.**

Certain lamps that will retain all the glass particles should inner arc-tube rupture occur are commercially available from Philips Lighting Company.

RELAMP FIXTURES AT OR BEFORE THE END OF RATED LIFE. Allowing lamps to operate until they fail is not advised and may increase the possibility of inner arc tube rupture.

CAUTION: TO REDUCE THE RISK OF PERSONAL INJURY, PROPERTY DAMAGE, BURNS AND FIRE RESULTING FROM AN ARC-TUBE RUPTURE THE FOLLOWING **LAMP OPERATING INSTRUCTIONS** MUST BE FOLLOWED:

LAMP OPERATING INSTRUCTIONS:

- Turn off lamps at least once a week for at least 15 minutes in systems which are operating on a continuous basis (24 hours/day-7 days/week). FAILURE TO TURN OFF LAMPS FOR THE MINIMUM RECOMMENDED TIME MAY INCREASE THE POSSIBILITY OF AN INNER ARC-TUBE RUPTURE.
- RELAMP FIXTURES AT OR BEFORE THE END OF RATED LIFE. Allowing lamps to operate until they fail is not advised and may increase the possibility of inner arc tube rupture.
- Use only in an enclosed fixture capable of withstanding particles of glass having temperatures up to 1000° C.
- Before lamp installation/replacement, shut power off and allow lamp and fixture to cool to avoid electrical shock and potential burn hazards.
- Use only auxiliary equipment meeting Philips and/or ANSI standards. Use within voltage limits recommended by ballast manufacturer:
 - Operate lamp only within specified limits of operation.
 - For total supply load refer to ballast manufacturers electrical data.
- Periodically inspect the outer envelope. Replace any lamps that show scratches, cracks or damage.
- If a lamp bulb support is used, be sure to insulate the support electrically to avoid possible decomposition of the bulb glass.
- Protect lamp base, socket and wiring against moisture, corrosive atmospheres and excessive heat.
- Time should be allowed for lamps to stabilize in color when turned on for the first time. This may require several hours of operation, with more than one start. Lamp color is also subject to change under conditions of excess vibration or shock and color appearance may vary between individual lamps.
- Lamps may require 10 to 20 minutes to re-light if there is a power interruption.
- Take care in handling and disposing of lamps. If an arc tube is broken, avoid skin contact with any of the contents or fragments.
- Do not use this lamp:
 - In a fixture that contains a Pulse Start metal halide ballast.
 - In a fixture that is specifically designed for use with Pulse Start metal halide lamps. **Operation of these lamps on Pulse Start Metal Halide systems may increase the chance of an outer bulb rupture and pieces of extremely hot glass might be discharged into the surrounding environment. If such a rupture were to happen, THERE IS A RISK OF PERSONAL INJURY, PROPERTY DAMAGE, BURNS AND FIRE.**



© 2008 Philips Lighting Company. All rights reserved.
Printed in USA 4/08

P-5561-D

www.philips.com

Philips Lighting Company
200 Franklin Square Drive
P.O. Box 6800
Somerset, NJ 08875-6800
1-800-555-0050

A Division of Philips Electronics North America Corporation

Philips Lighting
281 Hillmount Road
Markham, Ontario
Canada L6C 2S3
1-800-555-0050

A Division of Philips Electronics Ltd.